


Quick Guide

Floor heating thermostat

ENSTO

ECO16BT-IM-084, ECO16BT-IM-083 and ECO16BT-IM-081

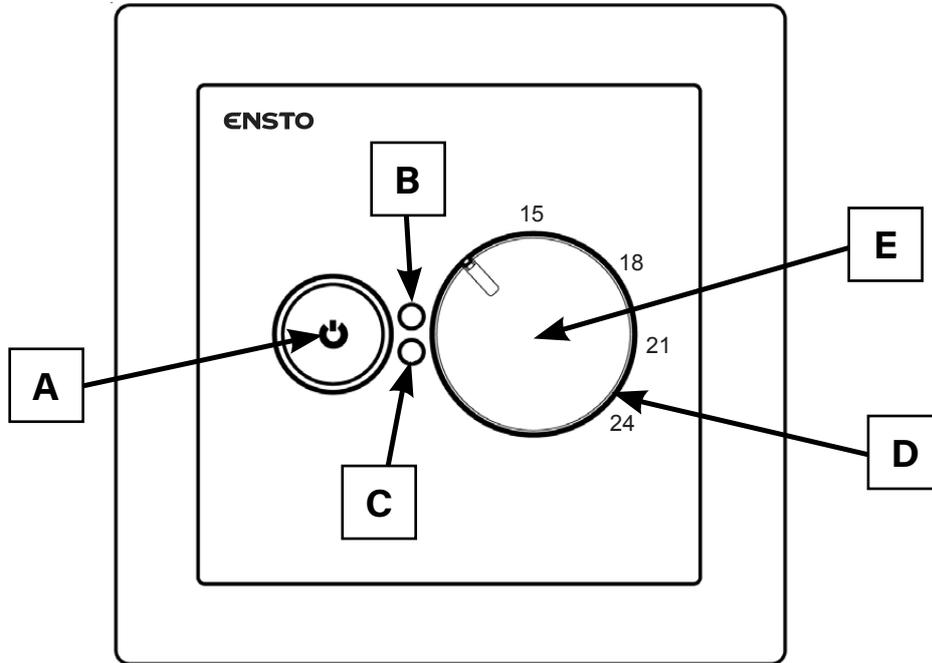

A Switch

Down: power is on

Up: power is off

B LED indicator B

● **Green:** the thermostat is on and the heating is off

● **Red:** the heating is on

C LED indicator C

☀ **Blue flashing:** Bluetooth pairing is in progress

● **Blue static:** temperature change is activated

● **Blue flashing fast:** resetting to factory defaults


D Bluetooth button is under the adjustment knob (E)

E Adjustment knob

Turn clockwise: the temperature rises

Turn counter-clockwise: the temperature drops

Note:

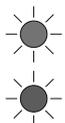

Blue and red LED indicator flashes alternately:
faulty floor sensor